

FTS, FTS-V, FTP-V, FTU-V FTW-V, FTP-V6, FTU-V6, FTW-V6

(AT) BEDIENUNGSANLEITUNG

(CH) BEDIENUNGSANLEITUNG

(CZ) NÁVOD K POUŽÍVÁNÍ

(DE) BEDIENUNGSANLEITUNG

(DK) MONTERINGSVEJLEDNING

(ES) MANUAL DEL USUARIO

(FR) MANUEL D'UTILISATION

(FI) KÄYTTÄJÄN OHJEET

(GB) USER MANUAL

(GR) ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΤΗ

(HU) HASZNÁLATI ÚTMUTATÓ

(IT) ISTRUZIONI D'USO

(LV) LIETOŠANAS INSTRUKCIJA

(LT) STOGO LANGO EKSPLOATACIJOS INSTRUKCIJA

(NO) BRUKSANVISNING FOR FAKRO TAKVINDU

(NL) GEBRUIKSAANWIJZING

(PL) INSTRUKCJA UŻYTKOWANIA

(RO) INSTRUCȚIUNI DE UTILIZARE


(RU) ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ

(SE) BRUKSANVISNING FAKRO

(SK) NÁVOD K OBSLUHE

(SI) NAVODILA ZA UPORABO

(UA) ІНСТРУКЦІЯ ПО ЕКСПЛУАТАЦІЇ

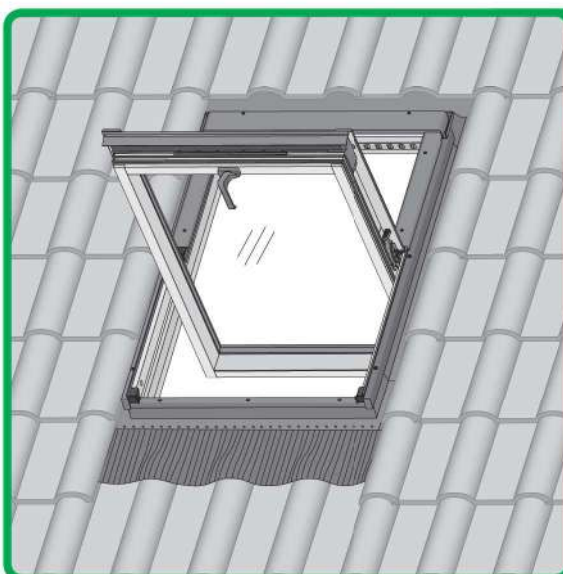





FTS
FTS-V
FTP-V
FTU-V
FTW-V
FTP-V6
FTU-V6
FTW-V6




ARS
ARP
ARF
AJP
APS
APF





AMZ
ARZ

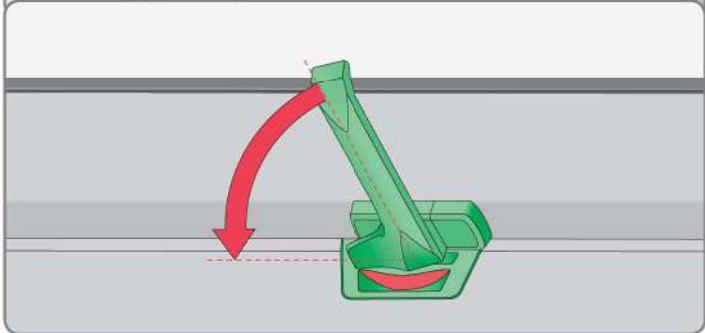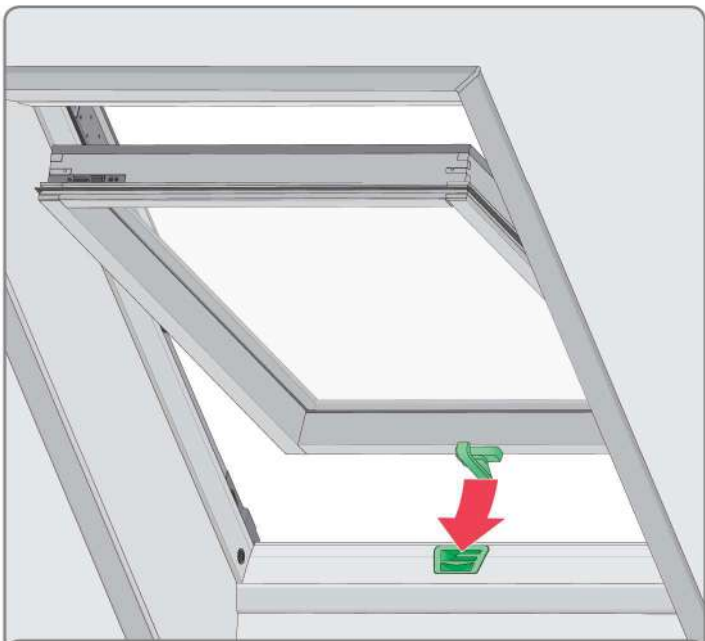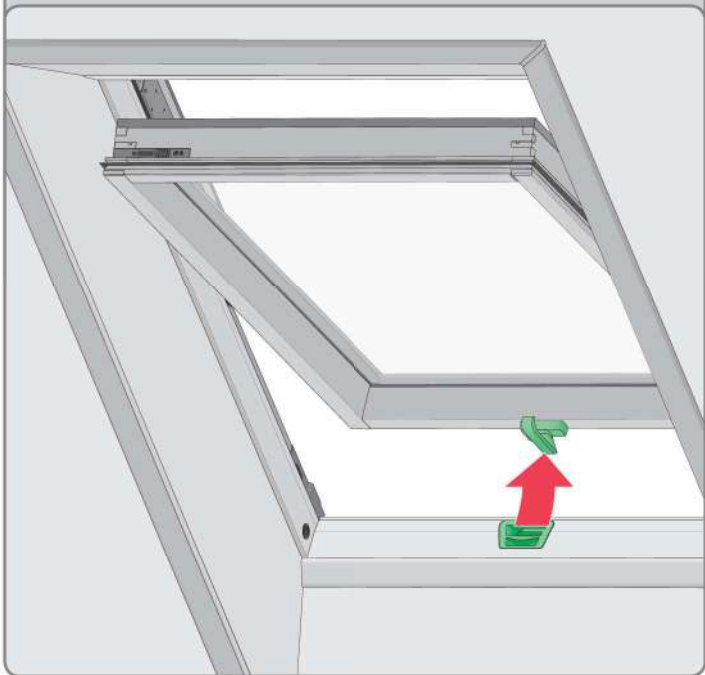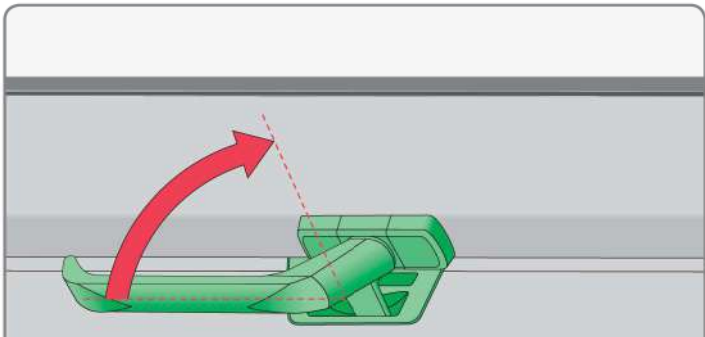

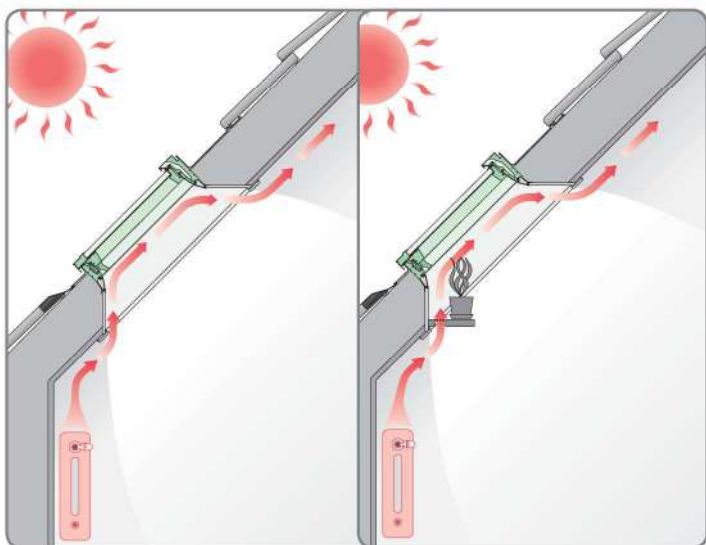

V10, V20, V40P

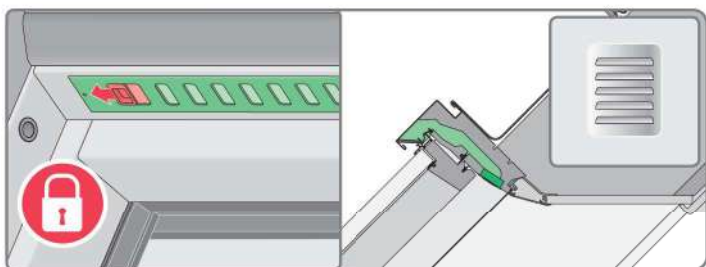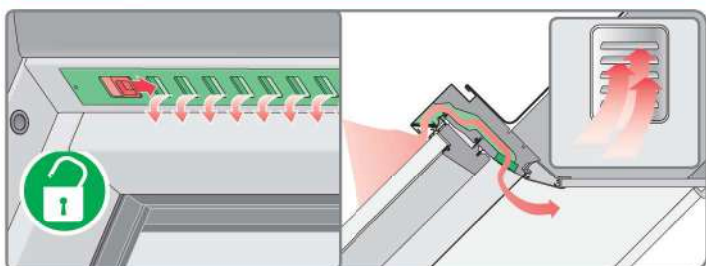

V60

